

Made in America

Lifetime Guarantee



Thank you for purchasing this instrument from Intellitronix. We value our customers!

INSTALLATION GUIDE

Chevrolet Monte Carlo/El Camino Dash Panel

Part Number: DP9002

Year Series: 1978-88



***Note: there is an installation video and tips on our Intellection.com under support. ***

*** Always disconnect the battery *before* attempting any electrical work on your vehicle. ***

KIT COMPONENTS

One (1) Digital Circuit Board (with Speedometer, Tachometer, Fuel, Voltmeter, Water Temp, Oil Pressure Gauges)

One (1) Smoked Acrylic Lens **** Peel off protective covering from both sides ****

One (1) Temperature Sending Unit (S8013) - 1/8" NPT, 0-255 Deg., 1/2" NPT Bushing

One (1) Pressure Sending Unit (S8434) - 1/8" NPT, 0-100 PSI Oil Pressure

One (1) Universal Speedometer Sensor (S9013) - 7/8" NPT Industry Standard threads

◇ **One (1) Mounting Kit:**

Four (4) #6-32 x 1 1/4" Recessed Phillips head screws

Four (4) #6 Nylock nuts **Four (4) #6 x 3/8" Nylon spacers.**

1 - DP 9002

Intellitronix

(rev. 09/10/2020BB)

www.intellitronix.com

DASHBOARD REMOVAL AND INSTALLATION

Disassembly

1. Remove the existing dash cluster from the vehicle. Separate the front bezel from the back housing and gauges.
2. Remove the bezel, inner gauge frame and gauges from the old assembly.
3. Attach the acrylic lens to the front of the panel, using provided mounting kit.
4. Attach the new panel to the front of the housing, and re-insert the frame into the housing, and reattach to the bezel, re-using the original screws and other hardware.
5. Wire the gauges and sending units to the panel as indicated by the instructions below.

See the back of this guide for some Illustrations on assembly.

WIRING INSTRUCTIONS

Note: *Automotive circuit connectors are the preferred method of connecting wires. However, you may solder if you prefer.*

Note: LS Engines or any other Computer based engine systems most use provides sensors and install new wires to new sensors

Note: *If doing a LS engine swap, pick up the tach signal wire from the ECM/ECU and then set the tach switch to 4-cylinders. You may also need to order the Intellitronix LS Engine Swap Adapter Kit for Series 1, 2 and 3 engines. The part number is 8014LS. If you are getting the tach signal from the ECU, the resistor in the adapter kit will help pull a stronger signal for the tachometer. If your engine is a LS the Tachometer will need to be put into 4 cylinder mode by removing Resistors if the Tachometer does not have a push button for programing, please call Tech Support at Intellitronix, as you may need to send the gauge back to us to be reconfigured. There is no charge for this additional service.*

Ground – Black--This is the main ground for the display system. A wire should be run from this board to the vehicle engine block for the best ground. Use 18 AWG or larger wire to ensure sufficient grounding. Proper vehicle grounding is extremely important for any gauges (or electronics) to operate correctly. The engine block should have heavy ground cables to the battery, frame, and firewall. Failure to properly ground the engine block, senders, or digital dash can cause incorrect or erratic operation.

Power - Red--Connect the power terminal to accessory +12V power from the fuse panel or vehicle wiring harness. Using a 5-amp fuse or an inline 5-amp fuse holder. This terminal should have power when the key is on or in accessory position. Use 18 AWG wire to ensure the system receives a sufficient power feed.

Use 18 AWG wire to ensure the system receives a sufficient power feed.

Water – Blue – This is signal wire for water temp. This gauge is incompatible with other sending units, so you must replace the existing water temperature sending unit with the included sender.

Water –Black/ Blue -This is ground for water temp sender and must be wired to corresponding wire on dash.

Oil Pressure – Orange (Signal wire) Replace the existing oil pressure sending unit with the unit included. Connect to the signal post on the oil sender.

Oil Pressure – Orange/Black (Ground wire) Connect to the ground post on the oil sender.

Dimmer – Purple Connect to the parking lights to dim the LEDs 50% when the headlights are on. However, ***DO NOT*** connect to the headlight rheostat control wire, or the dimming feature will not work properly and may cause damage to Unit.

Right Turn Signals - Grey with White strip RIGHT turn signal. This wire works when 12v is activated.

Left Turn Signals – Grey with Black strip Left turn signal. This wire works when 12v is activated.

CABLE BUTTONS

Trip/Cal Button – Grey Cable Button or Push button on Dash - There are two grey wires connected to the push-button for the speedometer board. Mount the switch in a convenient location such as under the steering column so that you may easily reset your trip odometer or other speedometer functions.

Tach program Button – Grey Cable Button or Push button on Dash There are two grey wires connected to the push-button for the tachometer board. Mount the switch in a convenient location such as under the steering column so that you may easily set the other functions of the tachometer.

FUEL GAUGE

Fuel – Yellow – The fuel gauge sending unit is not normally supplied because the display system can use the existing fuel level sending unit in the tank in most cases. If your wiring harness already has a single wire routed through the vehicle for the fuel sender, then it may be used. If using a wire from an external harness, make sure that the wire does not have power. Fuel senders reference their ground from the sender mounting plate. Connect the yellow wire to the factory sending unit.

Fuel –Black/Yellow – Run a new ground wire and attach to your Fuel sending unit housing to ensure proper fuel gauge operation. If the sending unit does not have a sufficient ground it will not work properly.

Note: The default setting for this dash is the GM industry standard of 0-90Ω

See Test on next page

Note: FUEL GAUGE TEST The most common problem with our Fuel Gauge not working is the circuit is not complete. The easiest way to test this is to use a voltmeter and test for continuity on wires going to fuel sender. With wire disconnected from Fuel Gauge check for continuity to ground. Without this the Gauge will not work.

Voltage Gauge – This Gauge Requires no wire hookup. Volt Gauge is built into the dash panel and is powered by the main power and ground connection of the dash. It does have an Adjuster to fine tune the voltage. Note: you will need to adjust it before fully installing the dash



SPEEDOMETER

Speedometer – White - (Factory sender with Powertrain Control Module) When using a LS engine swap, you will need to pick up the Speedometer signal wire from the PCM Pin 50 on the red connector. (This pin may Differ. Refer to your vehicles Pinout Chart for accuracy). Any other Computer based engine will need to use to use the PCM/ECM to run the speed signal for the Speedometer. (Consults Pinout)

Speedometer – White - (Factory two wire sender no PCM) - Most vehicles built after 1984 have an electronic transmission sender. If your vehicle is already equipped with an electronic transmission, then the electronic vehicle sender will usually have Two wires attached to it. One connects to the Signal wire on dash (we prefer this to be high output). The other wire (Low output) Ground at the Engine block. To find High and Low output wire color or pin location will need to be looked up by Vehicle vin or Model and year.


Speedometer - White (Intellitronix Speed Sender) - Disconnect the mechanical speedometer cable from the transmission and thread the new electronic sensor onto the transmission. This panel comes with a 3-wire sensor. If you are using this sensor you must follow these wiring instructions.

White -Wire is the speed signal; connect this to the speed signal wire on your gauge.

Red - Wires switch power (12VDC) and must be wired to **Red/White** on your Gauge.

Black - Wire is speed sensor ground and must be wired to **Black/White** on the Gauge.

NOTE:(Twist all Three wires together and this will provide an additional level of interference protection.) The speed signal wire should not be routed alongside the tachometer, ignition, or any other high-current or high-voltage wires

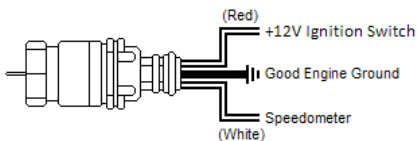

Tachometer – Green wire – Connect the wire from the tachometer to the negative terminal of the coil or a direct tach output lead from your distributor or electronic control module. If you are using an aftermarket capacitive discharge ignition system, such as an MSD, you must use the designated ‘tach output’ connection on the electronic box. Do not make any connections directly to the coil with this type of system. With high output Ignition systems may also create frequency noise that may interfere with operation of gauges that may require a tachometer filter.

If your vehicle has a GM HEI ignition, connect to the terminal marked ‘TACH’, or, on some systems, a single white wire with a spade terminal.

If your vehicle has a magneto system, connect the tach signal wire to the negative side of the coil. Do not connect the tach terminal to the positive (+ or high voltage) side of the ignition coil or may need a Tachometer adapter for proper operation of your Digital Gauges.

Diesel engines will require a Diesel Tachometer adapter for proper operation of your Digital Gauges.

PROGRAMBLE TACHOMETER SETTINGS

To change settings:

The display will stay in Settings Mode until it receives a signal from the ignition system. To program the unit after starting the engine, shut the engine off and turn on only to the accessory position.

When in accessory mode, the settings menu will scroll through the settings menu. A light tap on the button engages the menu system.

1. Sets # of digits in RPM display, using button, display shows: (hundreds) 8800, (tens) 8880, and (ones) 8888.
2. Sets # of cylinders using button, display shows: 1cy, 2cy, etc.
3. Sets first digit on max RPM on gauge bar display (in thousands) using button, display shows: 1000 to 9990.

CALIBRATION

Note: If using the Intellitronix GPS Sending Unit, (S9021 – not included) the speedometer does not need to be calibrated.

The speedometer leaves the factory with a pre-set industry standard setting of 8,000 pulses per mile. Chances are that you may not need to recalibrate your speedometer, unless you have changed the original tire size or the rear end gear ratio.

Note: Do not attempt to calibrate your speedometer until after it is working properly and you have determined that the speed is incorrect. The calibration procedure will NOT correct a faulty installation or improper wiring. If you attempt to recalibrate your speedometer without making sure the speedometer is receiving pulses from the sending unit, the speedometer will display 'Err' and default back to the factory settings.

To calibrate:

1. **Locate a measured mile where you can safely start and stop your vehicle.** By running the vehicle over this measured distance, the speedometer will learn the number of pulses outputted by the speedometer sensor during a specific measured distance. It will then use this acquired data to calibrate itself for accurate reading. There is a small recall push-button in the center of the panel used to calibrate and read all of the data stored in the speedometer. After installing your speedometer according to the wiring instructions, when the ignition is on it should immediately display the default screen of 0 MPH, if the vehicle is not moving.

NOTE: You will then need to drive your vehicle to the predetermined measured mile. During this trip, the speedometer should read something other than 0 MPH. If it does not change, return and locate the problem before continuing. Otherwise, proceed with the calibration.

2. Stop at the beginning of the measured mile with your vehicle running and in odometer mode (NOT trip mode), press and hold the push-button until the odometer displays 'HI-SP'. On its own, the gauge will then cycle through the recorded performance in the following order: '0 – 60', '1/4', 'ODO', and 'CAL'.
3. While 'CAL' is displayed, quickly *tap* the push-button once. This will put the speedometer in Program Mode. If you did not tap while 'CAL' is displayed, the pulses per mile will be displayed on the odometer and the display will go back to MPH mode. Otherwise, you will now see 'CAL' displayed along with the number '0'. This indicates that the microprocessor is now ready for calibration.

4. When you are ready, begin driving on the metered mile. You will notice that the reading will start counting up. The odometer will begin to display the incoming pulse count. Drive the vehicle through the measured mile (speed is not important, only the distance traveled).
5. At the end of the mile, stop and press the push-button again. The odometer will now display the new number of speedometer pulses that were registered over the distance. The odometer will continue to display the pulse reading for a few seconds. Once it reverts to the default mode, you have successfully calibrated your speedometer.

Warning: *If, while in 'CAL' mode, you do not move the vehicle and press the button*

again, the microprocessor will NOT have received any data. The unit will display 'Err' and will revert to the factory settings. At a minimum, drive some distance and return to the start if necessary. If you miss stopping the display at 'CAL', simply repeat the steps.

Trip Distance

A single *tap* of the recall button will activate the trip meter in the odometer display. A decimal point will appear which will indicate that you are in trip meter mode. *Holding* the recall button will clear out the trip distance. To return to the default odometer display, *tap* the recall button again. The decimal point will disappear, indicating that you are back in the default odometer display.

Setting the Odometer

While scrolling through 'CAL' mode you will see 'ODO' appear. This will allow you to enter the vehicle's actual mileage. Press the trip button again at this point and you will enter the odometer set up mode. Press quickly to change the number of the digit on the right. Press and hold to advance to the next digit. Do this for all 5 digits. **For Example:** To enter the mileage reading 23456 into the odometer, at the 'ODO' prompt, tap the small black button (quickly) two times, until the number 2 is displayed. Then press and hold the button until the numbers 20 are displayed. Tap the button 3 times until 23 is displayed. Press and hold the button until 230 is displayed and continue in this manner until 23456 is displayed. The speedometer will advance to the home screen, five seconds after the last number is entered.

Recording and Viewing Performance Data

Follow these steps to record and recall Performance Data (high speed, ¼ mile ET, and 0-60 time):

1. Before each run, your car must be at a complete stop at the starting position. *Press and hold* the push-button as it cycles through the performance data. At the end, the odometer will reset and all performance data will be cleared. This will not affect your stored calibration value or the odometer reading.
2. Press the push-button until 'HI-SP' is displayed. The gauge will automatically cycle through the performance data.
3. Start the run, pass, session, etc., as mentioned above.
4. When finished, repeat *Step 2* to view the data gathered from the run. While stopped, you can view this data as often as you wish. However, once it finishes scrolling one time, the memory is ready to record new data and will begin recording again once the vehicle starts to move. The highest speed measured over multiple runs will be retained in memory.



Made in America

Lifetime Guarantee

Technical Support

Monday – Friday

9am to 5 pm EST

(440) 359 7200

support@intellitronix.com



RETURN POLICY PROCEDURES

1. Download the Intellitronix Return/Repair Form and fill in the information on the form about the product.
2. Place the product being returned in the original packaging that it came in and include a copy of the completed Intellitronix Return/Repair Form.
3. All packages must be accompanied with an RMA Number.

Please call Technical Support at +1 440-359-7200 to receive an RMA Number.

4. Mail the product being returned with the completed Return/Repair Form and a copy of the original sales invoice.

Request for Product Refund

1. All returns for a refund must have a completed Intellitronix Return/Repair Form included in the package with the returned product.
2. If the return is for a product that is not defective a 20% restocking fee will be charged. The product must be in the same pristine condition that it was sent to you.
3. Proof of purchase is required. Please include a copy of the original sales order with the returned product.
4. All product must be returned undamaged and in working order in the original packaging including plexiglass, sending units, mounting hardware, or you will be subject to additional charges for product and accessories not returned.
5. All refunds will be reviewed by the Accounting Office.

This product carries a limited Lifetime Warranty.

This warranty is limited to replacement or repair of the unit at the discretion of Intellitronix.